




# Digital Transport Adapter (DTA) Setup Guide



<http://dta.secv.com>

# What's included in this kit?

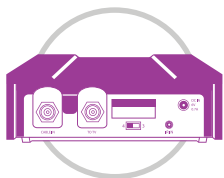

## Digital Transport Adapter (DTA)

You'll be connecting the DTA to the cable wall outlet and to your TV (or TV and VCR).




## Remote Control

In order to operate the DTA you must use the remote control included with this kit. Programming instructions for the remote control are included in this guide.




## 2 AA Batteries


For remote control.

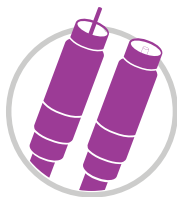

## 3-Foot Coax Cable

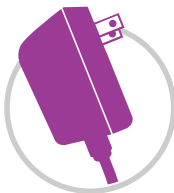

## Power Cord

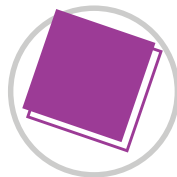

## Adhesive Fasteners

Use these if you want to stick the DTA to your TV.




## Optional Remote Eye (IR Receiver)

If you prefer to hide the DTA behind your TV, you will need to connect this to your DTA so your new remote control can send signals to it.


# Installation and Activation: TV

## 1 Connect the DTA to the Cable Outlet

**A** Locate the cable that currently runs from the cable wall outlet to the back of your TV. Leave one end of the cable connected to the wall and disconnect the other end from the back of your TV.

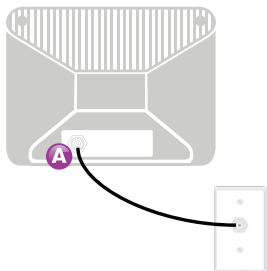



**B** Reconnect this end of the cable to the "Cable In" input on the back of the DTA.

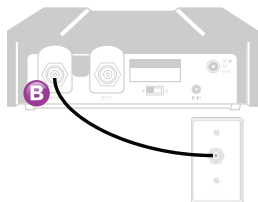

## 2 Connect the DTA to the TV

**A** Find the 3-foot coax cable included in this kit. Connect one end of the cable to the "To TV" input on the back of the DTA.



**B** Connect the other end to the "Cable In/RF In" input on the back of your TV.

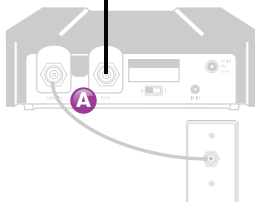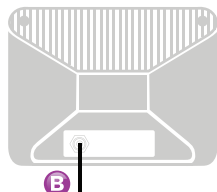

## 3 Power Up

**A** Plug the round end of the power cord into the "Power" input on the back of the DTA.



**B** Plug the other end into a live power outlet or surge protector.

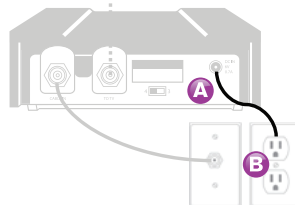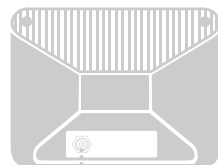

## 4 Set the Channel

**A** Turn on your TV and tune it to channel 3 or channel 4.

**B** Set the switch on the back of the DTA to channel 3 or channel 4.

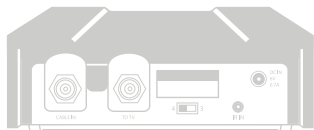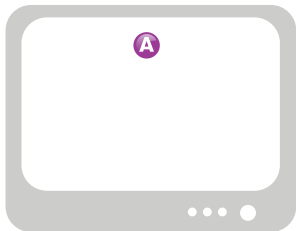

3/4 **B**

## 5 Activate

To activate your DTA visit **<http://dta.secv.com>** and click on the “Activate DTA” button. You will need your DTA serial number and your five-digit billing zip code.



Please allow up to **30 minutes** for the DTA to be activated. If you do not receive your proper channel lineup, please call our toll free DTA customer support number at **1.877.955.SECV (7328)**.


## 6 Confirm Your Service

**A** After completing Step 5, wait a few minutes.

**B** Make sure your TV is on.

**C** Confirm that the DTA is connected to the power outlet and that the light on the front is solid (not blinking).


**D** Using the remote control to operate your DTA, scroll through your channels and make sure they are all working. **Note:** If the light is blinking, or your channels are not showing up, turn to the Troubleshooting section of this guide.

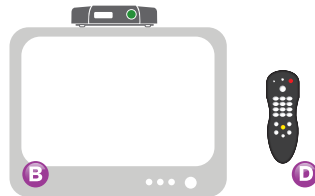


# Installation and Activation: TV & VCR

## 1 Connect the DTA to the Cable Outlet

**A** Locate the cable that currently runs from the cable wall outlet to the back of your VCR (or other recording device). Leave one end of the cable connected to the wall and disconnect the other end from the back of your VCR.

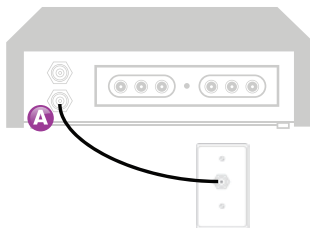


**B** Reconnect this end of the cable to the "Cable In" input on the back of the DTA.

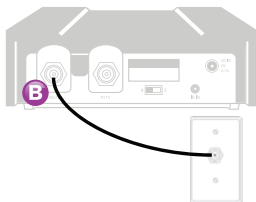

## 2 Connect the DTA to the VCR

**A** Find the 3-foot coax cable included in this kit. Connect one end of the cable to the "To TV" input on the back of the DTA.


**B** Connect the other end to the "Cable In/RF In" input on the back of your VCR.

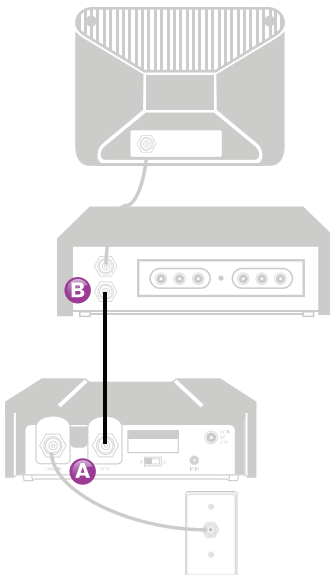

## 3 Power Up

**A** Plug the round end of the power cord into the "Power" input on the back of the DTA.

**B** Plug the other end into a live power outlet or surge protector.

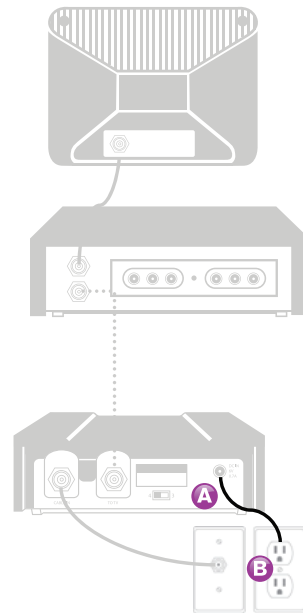

## 4 Set the Channel

**A** Turn on your TV & VCR, and tune it to channel 3 or channel 4.

**B** Set the switch on the back of the VCR to channel 3 or channel 4.

**C** Set the switch on the back of the DTA to channel 3 or channel 4.




3/4 **B**



3/4 **B**

## 5 Activate

To activate your DTA visit <http://dta.secv.com> and click on the "Activate DTA" button. You will need your DTA serial number and your five-digit billing zip code.

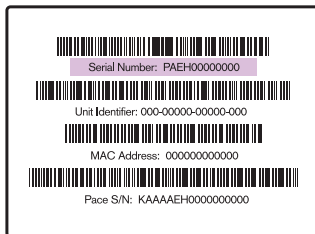

Please allow up to **30 minutes** for the DTA to be activated. If you do not receive your proper channel lineup, please call our toll free DTA customer support number at **1.877.955.SECV (7328)**.


## 6 Confirm Your Service

**A** After completing Step 5, wait a few minutes.

**B** Make sure your TV is on.

**C** Confirm that the DTA is connected to the power outlet and that the light on the front is solid (not blinking).

**D** Using the remote control to operate your DTA, scroll through your channels and make sure they are all working. **Note:** If the light is blinking, or your channels are not showing up, turn to the Troubleshooting section of this guide.

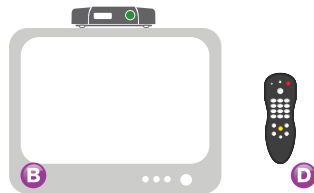

# Troubleshooting



## If the remote control does not work:

- Make sure the batteries are inserted correctly.
- Make sure your remote can “see” the front of the DTA (or the front of the Optional Remote Eye).
- If you are using the Optional Remote Eye Receiver, make sure it is connected firmly to the DTA.



## If there is no light illuminated on the front of the DTA:

- Make sure the power cord is attached to the DTA and plugged into a live electrical outlet.



## If there is no picture on the TV and the light on the DTA is blinking:

- Wait a few minutes. If the light is still blinking, call Service Electric Cablevision at **1.877.955.SECV (7328)**.

## If there is no picture on the TV and the light on the DTA is solid:

- Make sure the TV and DTA are both set to the same channel (both 3 or 4).
- If you are also connected to a VCR, make sure the VCR is turned on and set to the same channel.
- Make sure the DTA “Cable In” is connected directly to the cable outlet on your wall.
- Make sure all the cables are firmly connected.



## If the audio is in a language you do not expect to hear:

- You may have accidentally changed it to an alternate language option. Press the “LANG” button on your remote control one or two times.

If you need additional support, go to <http://dta.secv.com> or call **1.877.955.SECV (7328)**.

# Using Your Remote Control



To program the remote to control your TV's power and volume, do the following:

1. Turn on your TV.
2. Press and hold "Set" until the red light on the remote blinks twice. Release "Set."
3. Enter 9 - 9 - 1. The red light on the remote will blink twice.
4. Point the remote at the TV and press "CH +" one or more times until the TV turns off.  
**Note: You may need to press "CH +" numerous times.**
5. Press "Set" once to lock in the code. The red light on the remote will blink twice.
6. Press Power to turn your TV on. If you need more help, please refer to the programming guide included with the remote.

To control the volume, press and hold the volume up "Vol +" or volume down button "Vol -". To change the channel, press the channel up "CH +" or channel down "CH -" button, or press the channel number and enter.



## Using the Optional Remote Eye

If you want to hide the DTA behind the TV, or if the DTA will not reach the front of the TV, you can hide it and use the Optional Remote Eye. Plug the smaller end of the Optional Remote Eye into the "IR In" port on the back of the DTA. Position the other end of the Optional Remote Eye where it can be seen from the front of the TV.